

**BOSKA®**

SINCE 1896

*Food Tools for Life*

## Disposable Burners - EN

### Description

A disposable burner with wick is a simple and safe solution for preparing and keeping fondue dishes warm, such as cheese, chocolate, or broth fondue. These burners come pre-filled with fuel paste and feature a wick. The burner is reusable because it can be sealed with a screw cap. The total burn time of the burner is up to 5 hours.

Here's how to use it:

1. **Open the burner:** Unscrew the cap of the burner.
2. **Place the burner:** Set the burner in the fondue frame.
3. **Light the burner:** Light the wick of the burner and ensure the flame stays lit.
4. **Extinguish the burner:** Finished with fondue? Extinguish the flame using the included flame regulator

Note!:

- The burner stays hot even after use, so allow it to cool down first.

---

### Warnings



**CAUTION**

OBJECT(S) GET HOT IN USE

**HANDLE WITH CARE**

KEEP OUT OF REACH OF CHILDREN



**WARNING**

LIQUID FUEL INSIDE

**HARMFULL IF SWALLOWED**

KEEP OUT OF REACH OF CHILDREN